SSUE ITEM

DEC. DIM. ±


FRAC. DIM. ±

ANGULAR DIM. ±

CHANGED FROM

SCALE:

TOLERANCES

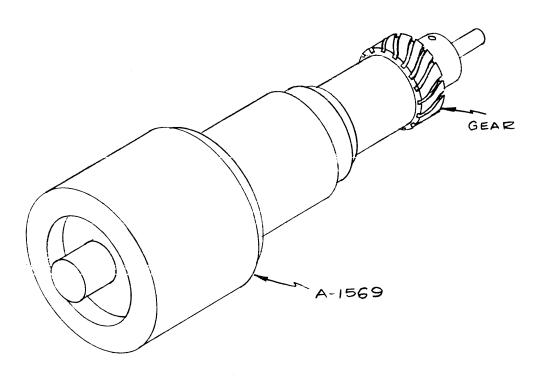

RTF

MODEL

REQ.

PER

GPT-750

PROJECT NO.

CH. NO. DRAFTS CHECKER ENG. APP.

MAXIMUM ALLOWABLE TOLERANCES HAVE

BEEN DETERMINED AND ANY DEVIATIONS

REMOVE ALL BURRS AND SHARP EDGES

WILL BE CAUSE FOR REJECTION.

REPLACEMENT OF VACUUM CAPACITOR C113 (AM-108)

Set Counter on Panel to read 99 6.

Remove Plate Connection on top of Capacitor

Loosen Screw on Clamping Bracket on side of Capacitor; which is located on top of Chassis.

Loosen Vertical gear set screws.

9 - 5 - 58

ASS'Y. NO.

USED ON

Carefully remove Capacitor by lifting straight up Gear and Capacitor will come out as one unit.

SEE PRELIMINARY CHECK BEFORE MOUNTING

Insert new Capacitor Assembly and fully engage gears.

Tighten set screws in vertical gear; Screws on Bracket and reconnect Plate Capacitor.

Check reading on Front Panel. Stops should remain between 99 6 and 22 3

PRELIMINARY CHECK

Rotate shaft and gear clockwise; until the rotor of the Capacitor begins to move; then add 1/4 more turn.

MOVICE TO PERSONS RECEIVING THIS DRAWING

THE TECHNICAL MATERIEL CORPORATION claims proprietary right in the material disclosed hereon. This drawing is issued in confidence for engineering information only and may not be reproduced or used to manufacture anything shown hereon without permission from THE TECHNICAL MATERIEL CORPORATION to the user. This drawing is loaned for mutual assistance and is subject to recall at any time.

Procesty of:

THE TECHNICAL MATERIEL CORPORATION MAMARONECK, NEW YORK

REQ.	ITEM	PART NO.		DESCRIPTION			SYMBOL
STOCK SIZE			(SIZE	THE TECHNICAL MATERIEL CORP. MAMARONECK. NEW YORK			
				REPLACE	MENT OF VAC	UUM CAPACITOR	
	MATERIAL			(AM-108)			
				69/5/58	100	(The	
TYP	E & TE	MPER	HEAT TREAT, SPEC.		CHECKED	FINAL APPRO	VAL
			<u> </u>		al	ID-229	
	FINISH & SPEC. NO.			ELEC. DES. APP. MECH. DES. APP.			<u> </u>