

Instructions to Install Threshold Control Knob.

1. Remove right side cover.
2. Remove the extension shaft from threshold Control and replace with phenolic shaft supplied.
3. Attach knob to phenolic shaft.
4. Replace right side cover.

This change is optional in all Model CFA beginning with serial No. 163. It is published for the use of those operating stations desiring to make this change in previous units.

Bill of Material

1/4 dia. x 2 3/8 long phenolic rod	1 ea
Harry Davies black knob # 1400 with pointer; 11/16 dia. x 13/32 height, 8-32 set screw.	1 ea.

PX-203

DATE 4/17/52	Instructions to Install Threshold Control Knob. Serial # 101- 162 Model CFA Frequency Shift Converter	THE TECHNICAL MATERIEL CORPORATION MAMARONECK, NEW YORK	
DRN.			
CHKD. <i>CPB</i>		SHEET 1 OF 2	NO. S-194
APPD. <i>CPB</i>			

WAS AEM089